

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG




(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

3.0 PROCEDURE:

Install the D350-607-501 Conversion Kit, D350-607-511 Quick Release Mounting Kit or D350-607-431 Strut retrofit kit per Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C. While installing the Forward Strut perform the following:

- 3.1 Substitute the Forward Lower D3910-5 X-Tube Lug with the D3910-7 X-Tube Lug as shown in Figure 1.
- 3.2 Install the forward D4775-041 Strut Assembly. Transfer mark from the upper hole on the clevis of the D4775-041 Strut Assembly to the D3910-7 X-tube Lug and drill thru the lug $\varnothing 0.257$ - $\varnothing 0.261$ as shown in Figure 1. Touch up chemical conversion coating per MIL-DTL-5541. Check the witness holes located at the bottom end of the D4775-041 Strut Assemblies to ensure that the thread from the rod end extends past the witness hole.
Torque MS21042L4/-4 nuts to 50-70 in-lbs (5.7-7.9 N-m). Torque MS21042L6/-6 nuts to 160-190 in-lbs (18.1-21.5 N-m).
- 3.3 Complete the installation in accordance with Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C.

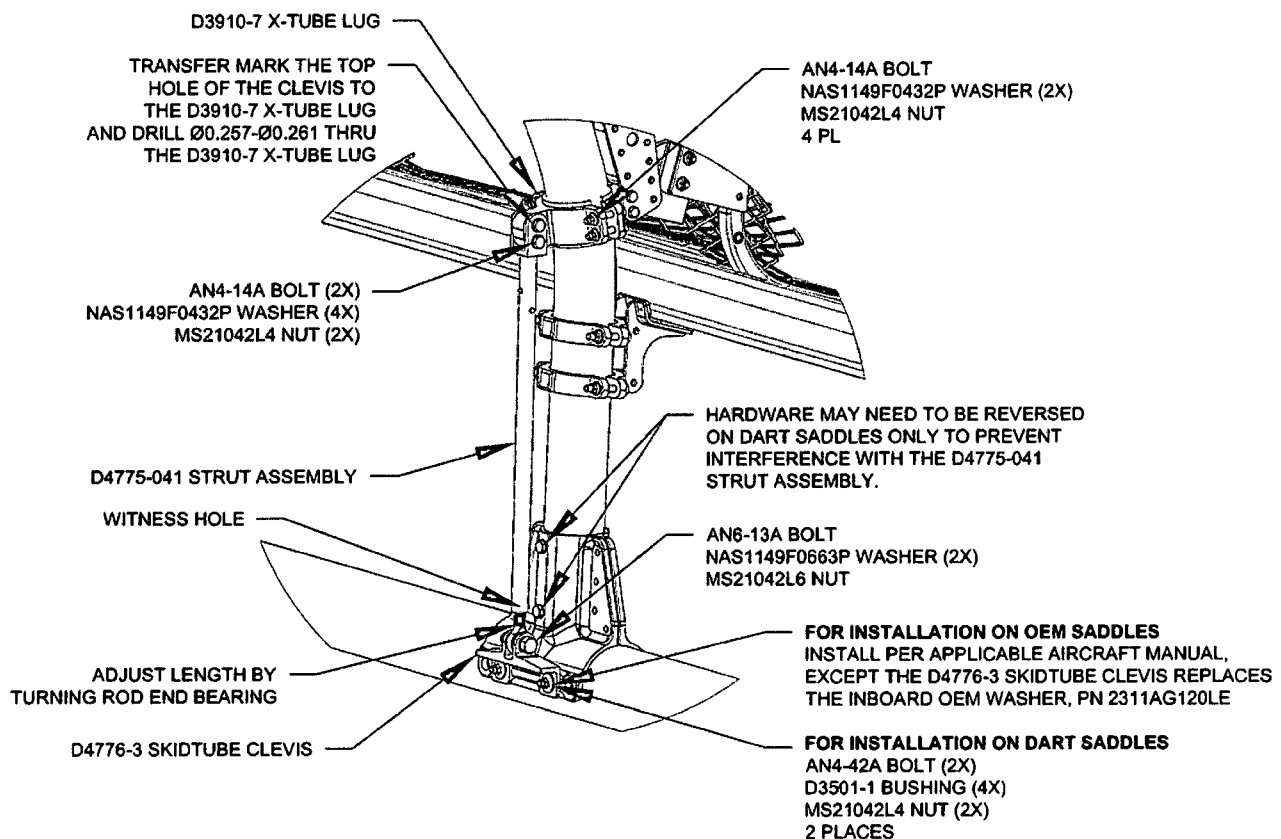


FIGURE 1: INSTALLATION OF D4775-041 FWD STRUT

4.0 WEIGHT AND BALANCE:

There is no weight and balance change associated with this update.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	